



**1.** Fold in side flaps A & B so they are at right angles with the base (ensure that the base has the embossed reference facing up)

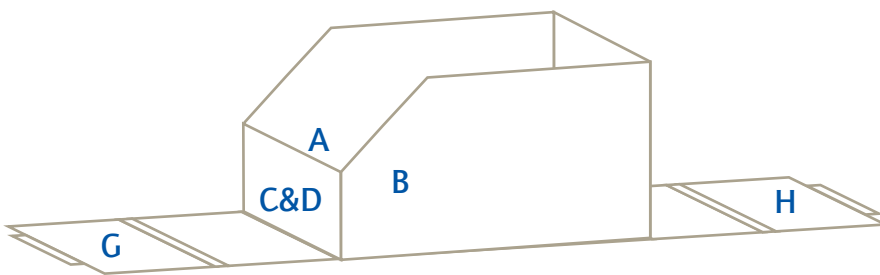

**2.** Fold in end flaps C & D and then fold flap G over the top and tuck into the slot inside.

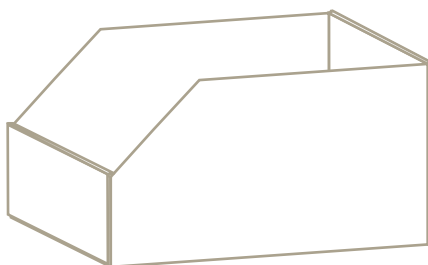

**3.** Repeat at opposite end with flaps E, F, and H